


## Graupner Hott MZ 32 Gyro Receiver Detection Guide

First switch on transmitter and receiver.

Start display:



Touch the button  
“Menu”

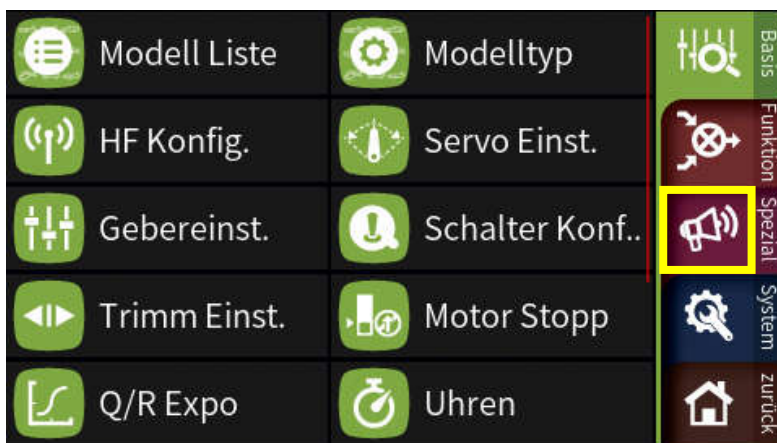

Touch the button  
“Special”

Display will show following screen:

Next step:  
Touch the button  
“Telemetrie”



Next screen;



Touch the button  
"Einstellen & Anzeigen"

Next screen will show the receiver basic properties  
You will come to the next screen;



If you can read **Fläche/Fixed Wing or Heli**, it is a receiver with gyro.  
No modeltype → no gyro!

You can see some more when you touch twice on the arrow button to the right

The following screen is for adjusting the gyro:



The picture shows a gyro receiver with the possibility for the configuration.

If it isn't a gyro receiver, this page will not be available.