

Jeti Duplex Assist (Gyro) Receiver Detection Guide


First switch on transmitter and receiver.

Start display:



The number of windows on the display may be less. Sometimes only model name.


Then push menu button:

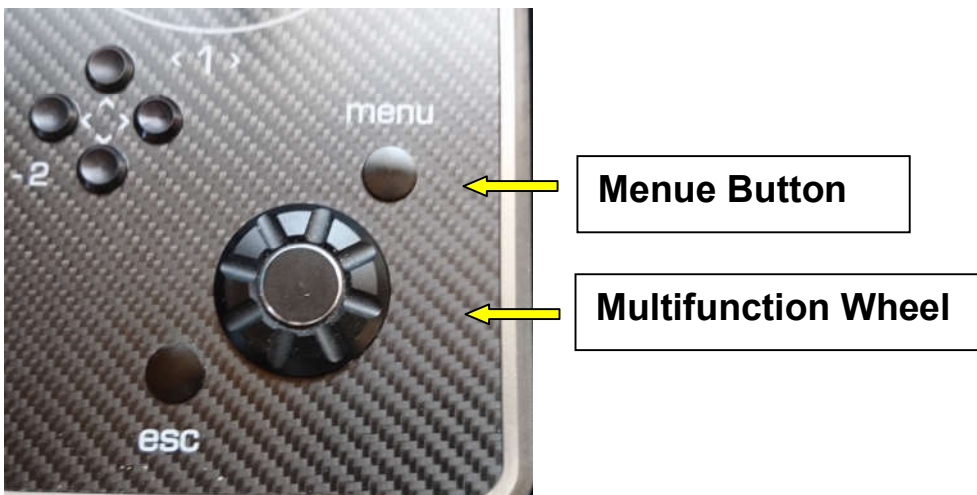

Display will show Hauptmenü/Main Menu:





Push Multifunction Wheel again to open Modellwahl/-modification/Model

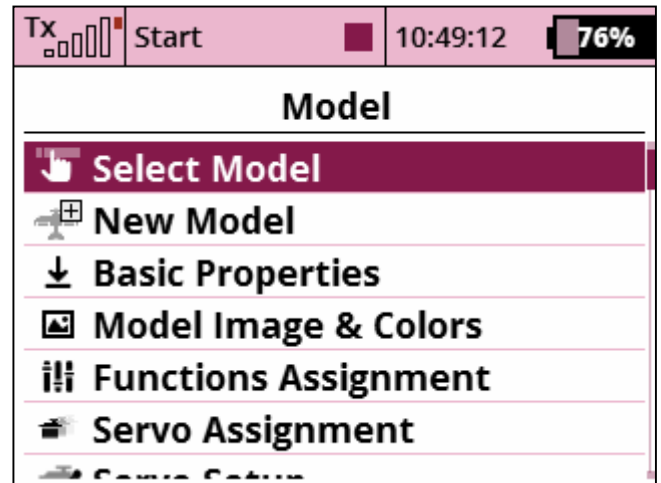

Next step is to turn control wheel and go to Geräteübersicht/Device Explorer:



Push multifunction wheel again:

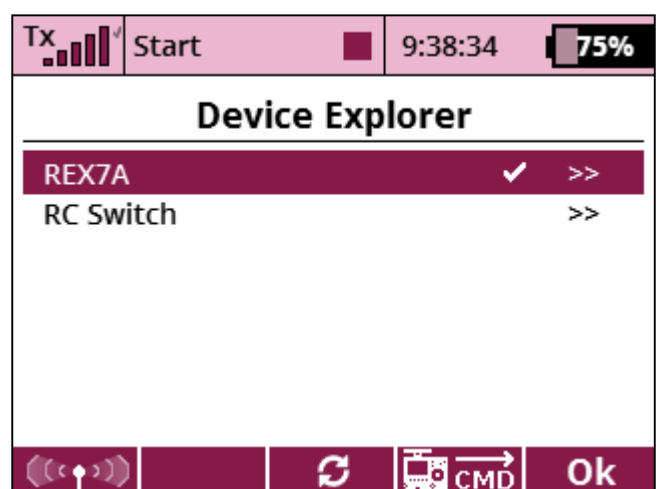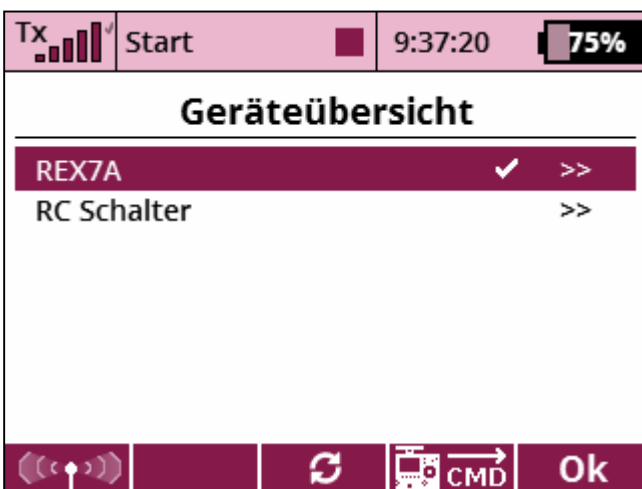

If you see **REX6A**, **REX7A**, **REX10A** or **REX12A** this will be an **ASSIST** receiver with integrated gyro stabilization system

Also starting time of an Assist receiver is longer than with normal EX or REX receivers.